



Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

UK CA **CE** For Use with KSR98101 & KSR98125

Important Information

It is recommended that our Emergency luminaires & Accessories are installed and fitted by a qualified electrician ensuring the installation complies with current wiring regulations & local building control. Any faulty, broken or damaged parts should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation. Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 - 45°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Installation Procedure


Familiarize yourself with the installation procedure and ensure the power is safely isolated before installing the Blade or Frame accessory.

To install the Blade Accessory - Remove the front cover of the KSR98101 or KSR98125 by removing the two screws located on the front, put the diffuser to one side, if not already in situ, fit and wire the fitting as per the fitting instructions, replace the removed diffuser with the KSR98116 Blade accessory and screw into place using the screws provided ensuring the seal is still in place and not damaged. Use the required legends provided with the blade accessory as required.


To install the Frame Accessory - Cut a rectangle hole in the ceiling 370mm x 125mm with a minimum void depth required of 40mm (we recommend a trial piece of board or similar prior to cutting your ceiling or intended place of installation) push up the spring clips and insert / snap into place, fix the KSR98101 or KSR98125 fitting into place through the 2 fixing points on the back of the fitting (240mm apart) via the fixing holes in the frame. Fit and wire the fitting as per the instructions provided, if also using the Blade accessory please refer to the above to install the blade.

These accessories transform a standard Emergency Bulkhead (KSR98101 or KSR98125) into a surface fitting with hanging blade making them ideal for underground OR Multi Storey Car Parks and a recessed frame to house the bulkhead where there is less headroom, the blade can also be used when being recessed.

KSR98116 - Blade Accessory c/w Legend Set for KSR98101 or KSR98125.

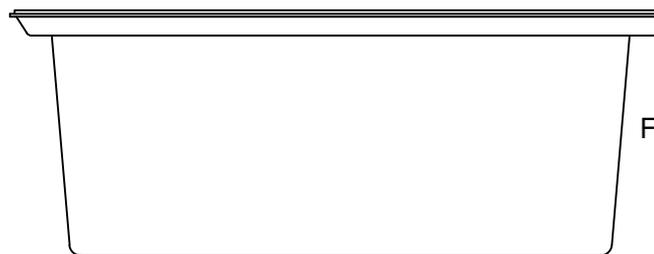


Front View.

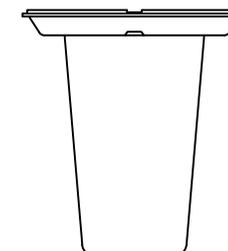


Side View.

Top View.

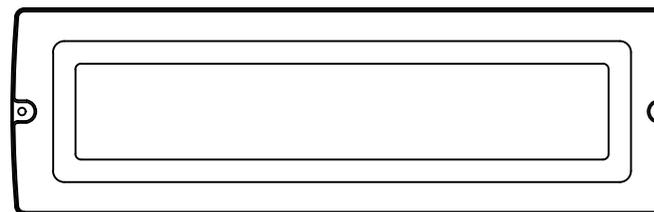

Examples of Legends


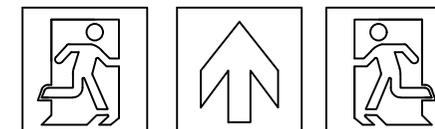


KSR98117 - Recessed Frame for KSR98101 or KSR98125

Cut out



370mm x 125mm

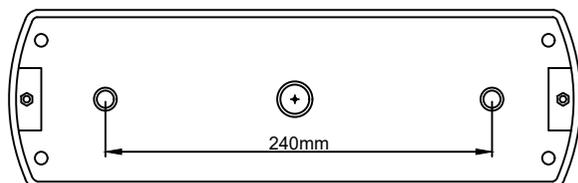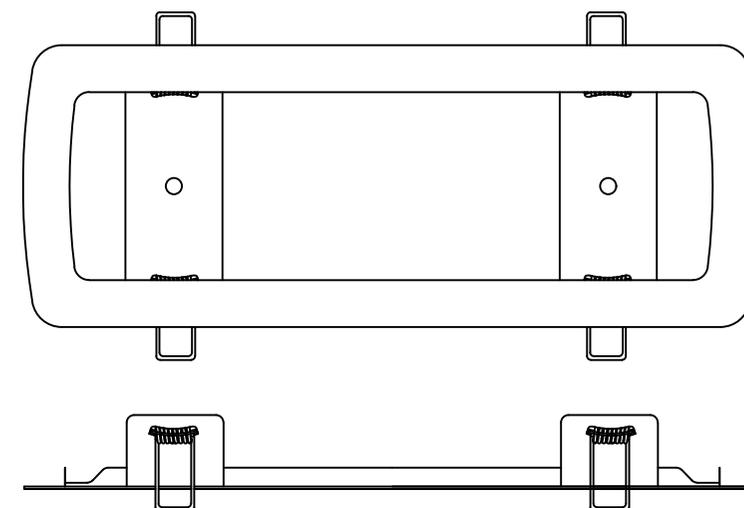

KSR98101 & KSR98125 (Back)
- fixing positions - Marry up with the fixing positions on the recessed frame.



KSR Lighting Aftersales: 023 92 674343
E-mail: aftersales@ksrlighting.com