



Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP20↑  
IP65↓  
UK CE 0.3m 240V~50Hz 6W/8W

These fittings are Class I and must be Earthed

Part "B"



BS476  
Part 21

Part "C"

Compliant  
Stops moisture &  
air flow through  
the luminaire

## Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current wiring regulations & local building control.

These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 ~ +35°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

## Important User Advice

Always switch off mains supply before servicing.

This luminaire is suitable for indoor use only and should not be fitted to damp or wet surfaces such as freshly plastered or painted ceilings.

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

## Installation Procedure

KSR recommends that a sample hole is cut in some scrap material to familiarise yourself with the installation. Once you are completely satisfied:

Locate the area's suitable to install these luminaires.

Cut a 72mm round hole in the ceiling and ensure sufficient ceiling void without infringing on joists, water pipes or electrical cables.

Connect the mains supply to the Pro connector block (Blue - Neutral, Yellow/Green - Earth and Brown - Live). The snap up / down lever terminals allows mains loop in/loop out connections, if not looping through either of the L, E & N inputs can be used. Install the terminal cover/strain relief by pushing down until it grips the outer cable insulation.

Select the preferred colour temperature by sliding the selector switch to either Very Warm White (2700K), Warm White (3000K), Neutral White (4000K) or Cool White (6000K).

Proceed to Select the preferred Output via the Wattage Selector Switch either 6W or 8W

This must be done before the luminaire is powered on. Press springs back and place luminaire body into aperture.


If you are installing one of the KSR detachable rims remove the standard white rim by pulling the trim off of the main fitting, do not twist the trim. Attach new trim by pushing and snapping it into place.

This downlight can be loosely covered with mineral wool insulation.

*\*Please note: Depending on the amount of Qr fittings on a circuit you may have to upgrade the breaker due to the way electronic LED drivers start up with higher inrush currents compared to halogen lighting. If dimming see the recommended dimmers list over the page or visit [www.ksrlighting.com](http://www.ksrlighting.com) for information on the latest compatible dimmers any other questions please call our sales office*

### Installer Note:



To ensure a good connection strip back a minimum of 10mm of insulation, push the cable firmly into the connector and close the lever.

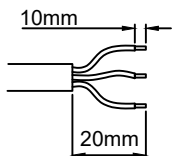


KSR Lighting Aftersales: 023 92 674343  
E-mail: [aftersales@ksrlighting.com](mailto:aftersales@ksrlighting.com)



Multiple rims available see [www.ksrlighting.com](http://www.ksrlighting.com) for options

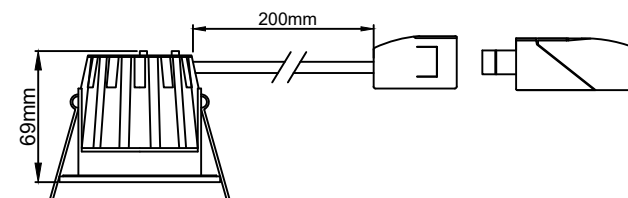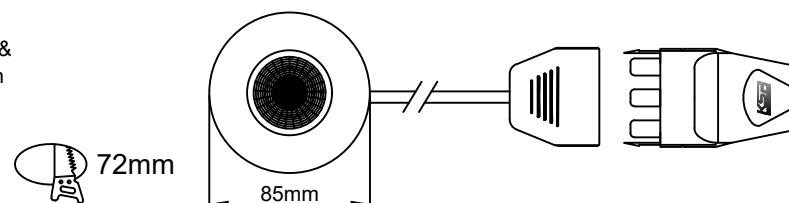


### Pro Lever push connector




### WARNING:

Do not change the CCT or Wattage of this downlight with the product switched on, all changes must be done with the power off.

Colour Temperature  
Selector Switch

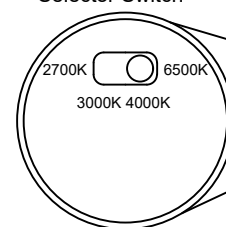

Wattage  
Selector Switch

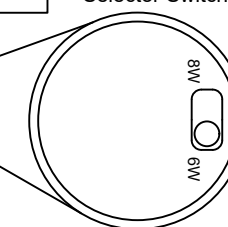

Rim Size	Cut out	Void Depth Required	Beam Angle	Dimmable	CCT	Lumen output	
						6W	8W
85mm	72mm	70mm	49°	Yes	2700K	335lm	415lm
					3000K	350lm	435lm
					4000K	370lm	475lm
					6000K	355lm	445lm

This product contains a light source of energy efficiency class G  
The LED light source in this product can be replaced by a professional.